




Packaging Hose, 4 ft, 230 V

A 4 ft, 230 V heated hose for automatic packaging guns on ProBlue, 2300 and 3000 melters. 12 pin connector at the melter end, 6 pin connector on the applicator cuff.

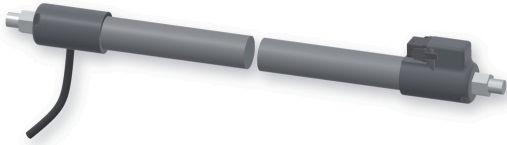

Packaging hose (render, not to scale)

Specifications

Hose type	Packaging hose
Length	4 ft
Voltage	230 V
Hose core (inside diameter)	5/16 in (#6)
Hydraulic fitting	9/16-18 JIC female, 11/16 in flats
Hose heater rating	27 W per ft (±5%)
Hose heater wattage	108 W nominal (4 ft)
RTD sensor	Ni120
Melter connector	12 pin
Applicator connector	6 pin (on the cuff)
Used on	Automatic packaging guns on ProBlue, 2300 and 3000 melters
Also replaces Nordson	100120

Connector faces



12 pin, melter end



6 pin, applicator end

- Gun heater ● Hose heater ● Gun sensor ● Hose sensor
● Shared sensor (RTD common) ● Ground ○ Not used

Hose side faces, looking into the connector. The ground symbol on the 12 pin face is pin 7.

Mates with gun cordset T

Gun side part	Replaces Nordson	HMSC part
Gun cordset T	274685	T2K46M5S
Heater and cordset assembly T, slim line MB2	1130591	HMS-C-1130591

Assembly

- Melter connector, 12 pin
- Hose cuff, melter side
- Heated hose
- Hose cuff, applicator side, with the 6 pin connector
- Hose fitting

Hoses carry line voltage and hot adhesive under pressure. Lock out power, relieve system pressure and let the hose cool before disconnecting connectors or fittings.


We build hoses to order. For another length, voltage or connector, call 1-888-202-1788 or email sales@hotmeltsupplyco.com with the Nordson part number, or tell us the connectors on each end, length, voltage, hose diameter and sensor type.



Product page



Wiring diagram

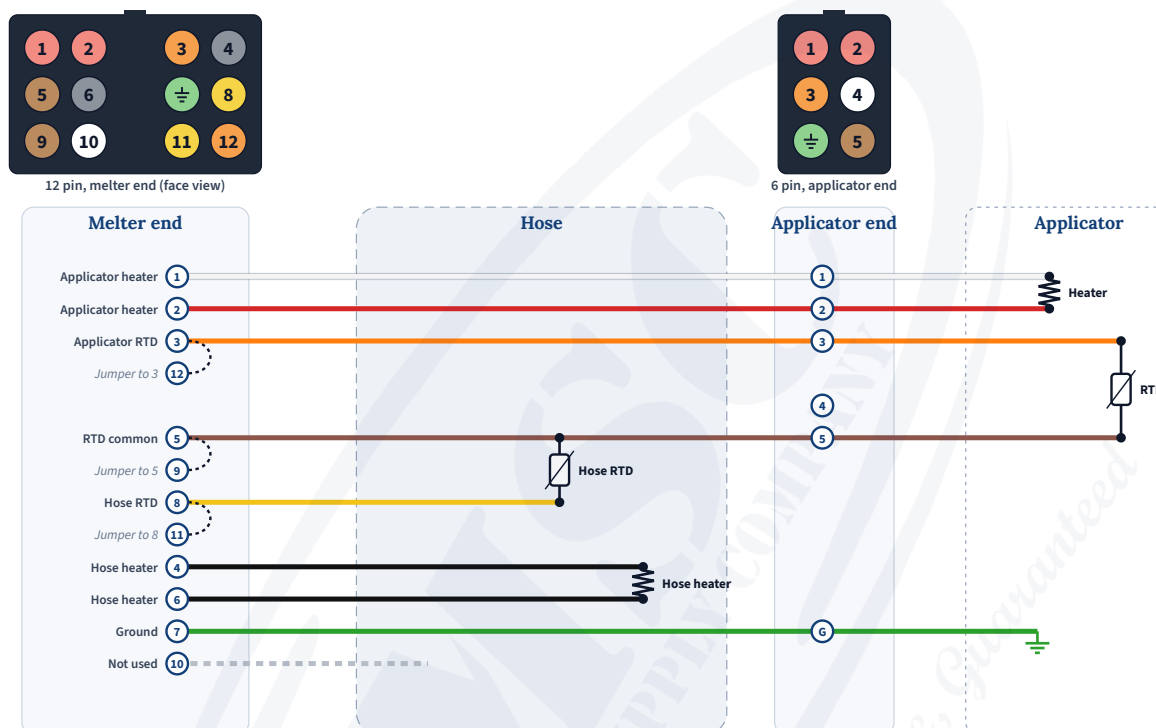

Pinout

Melter pin	Applicator pin	Function	Wire color
1	1	Applicator heater	White
2	2	Applicator heater	Red
3, 12	3	Applicator RTD	Orange
5, 9	5	RTD common	Brown
8, 11	In the hose	Hose RTD	Yellow
4	In the hose	Hose heater	Black
6	In the hose	Hose heater	Black
7	G	Ground	Green
10		Not used	
4		Not used	

Reading the diagram

- Melter end on the left, applicator on the right.
- Dotted lines are jumpers inside the 12 pin connector: 12 to 3, 9 to 5, 11 to 8. Jumpered pins are listed together in the pinout.
- The hose heater and hose RTD wires end inside the hose.
- Connector faces are shown on page 1.

Hoses carry line voltage and hot adhesive under pressure. Lock out power, relieve system pressure and let the hose cool before disconnecting connectors or fittings.